


Sleeve-Mount (Outside View)

Supplied metal primary flashing.

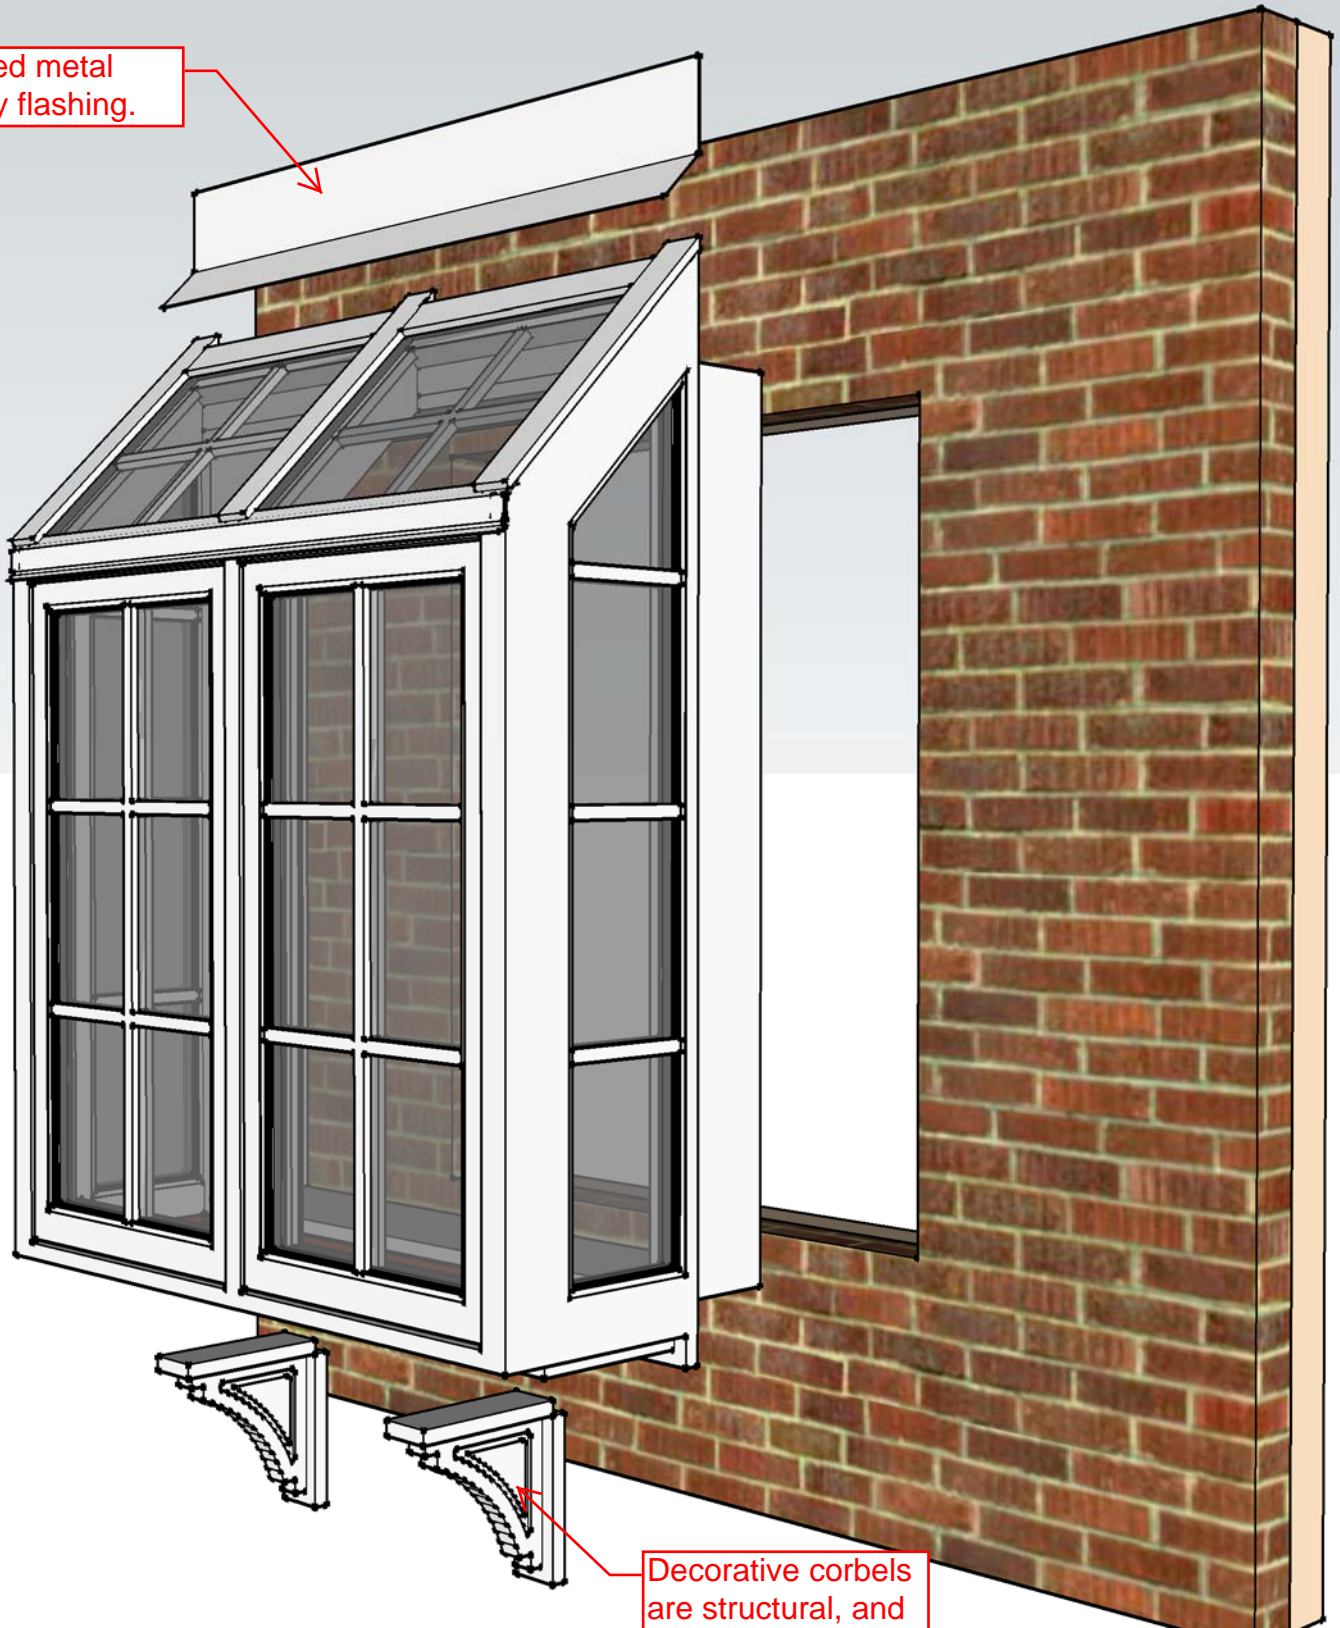

Decorative corbels are structural, and must be installed.


Sleeve-Mount (Inside View)

The sleeve must be sized large enough to penetrate the entire wall cavity. If in doubt, ask us to make the sleeve depth larger than the wall cavity.



Sleeve-Mount Counter Top Extension (Inside View)


Align the bottom plate of the rough opening with the top of the base cabinets.  
NOTE: The plate can be slightly lower than the cabinets, but MUST NOT BE ANY HIGHER!

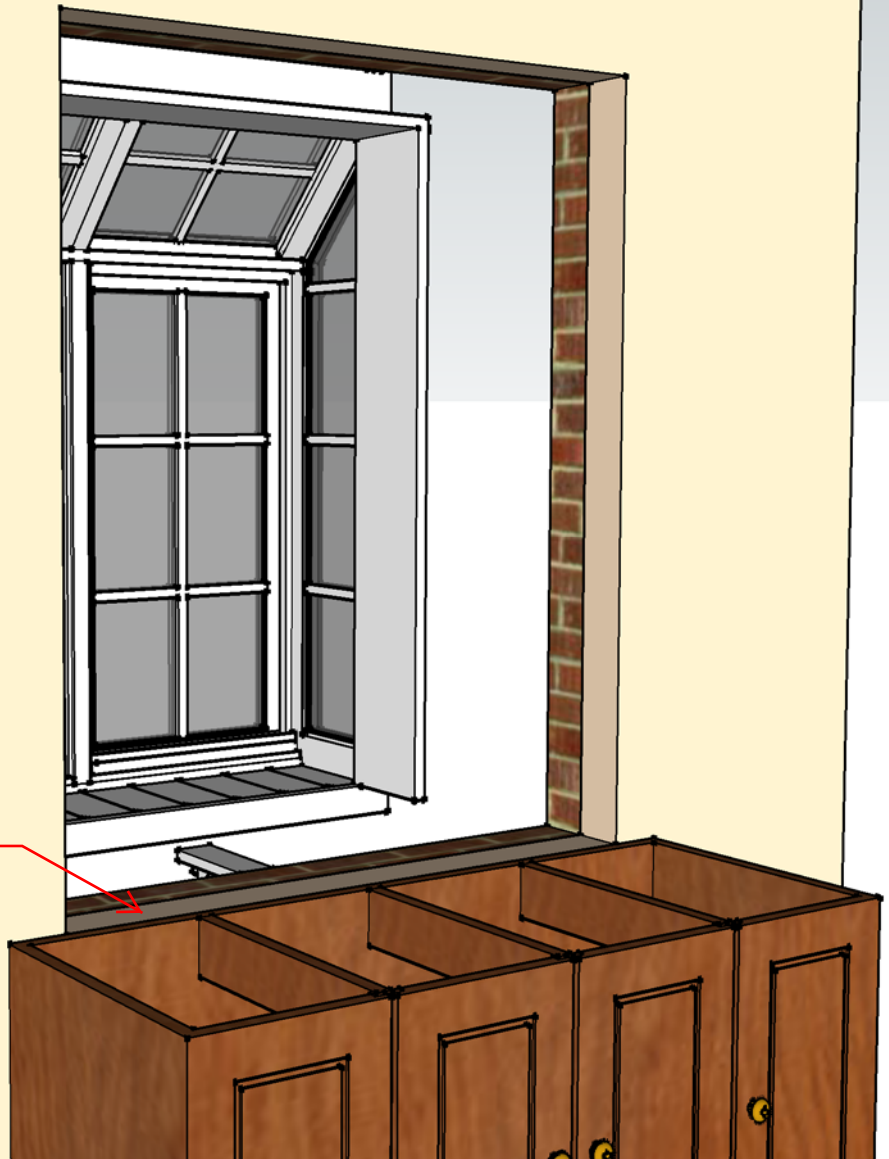

Face-Mount (Outside View)

Supplied metal primary flashing.

Mounting frame must be through-fastened to structural components of the building.

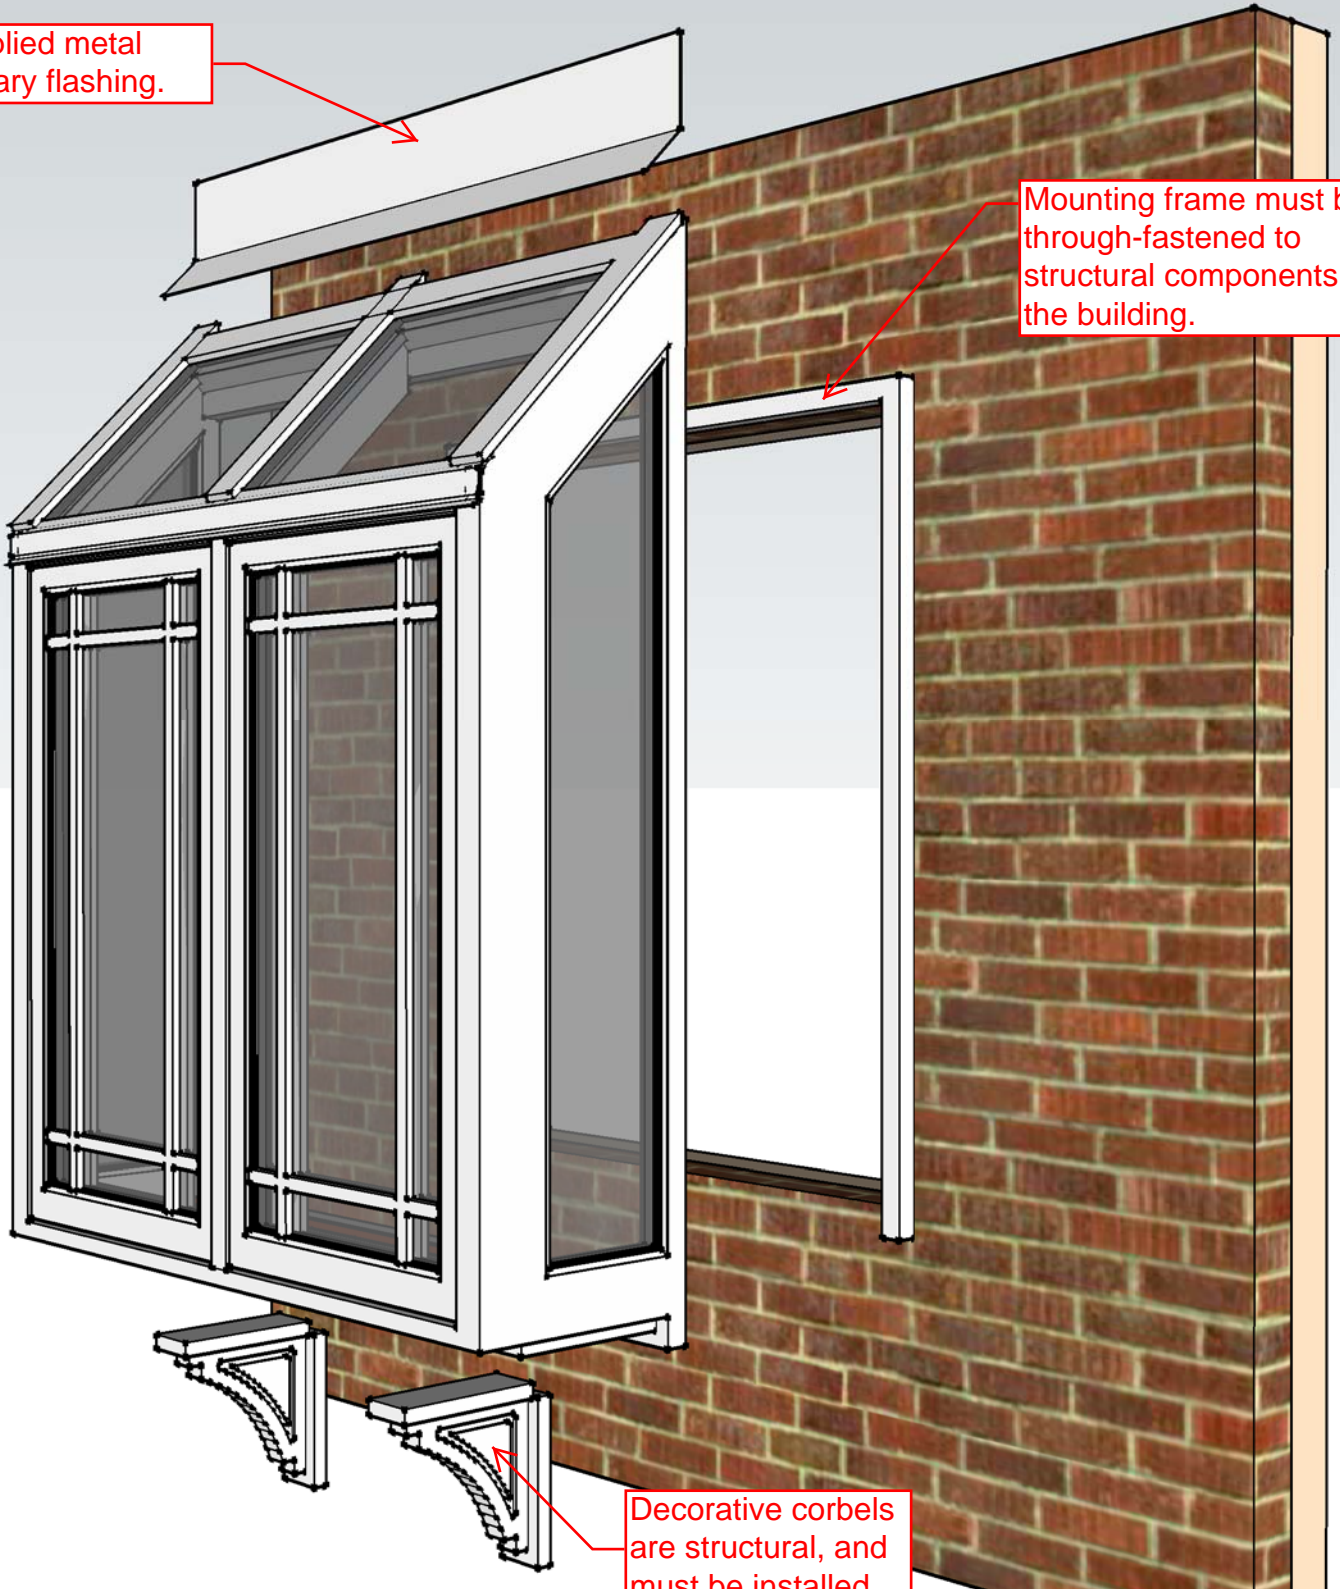

Decorative corbels are structural, and must be installed.

Face-Mount (Inside View)

Face-Mount windows will require casing (not included).

